

# DIGIOP<sup>®</sup> 2U Server Hardware Quick Start Guide

## SV-NVR Series

**Congratulations on your new DIGIOP<sup>®</sup> Video and Data Management System**

This guide provides setup instructions for your server hardware. Quick Start Guides and Manuals for the software can be found at [www.digiop.com/support](http://www.digiop.com/support). For more information, contact DIGIOP<sup>®</sup> Support at

800.968.3606 • [support@digiop.com](mailto:support@digiop.com) • [www.digiop.com](http://www.digiop.com)

## 1. Getting Started

### Unpacking the Contents

Items included with your system:

- Quick Start Guide
- Surge Protection Notice
- USB Flash Drive w/ backup image
- Power cord
- Mouse and Keyboard


### Choose a Proper Location

Select a location that meets the following:

- Adequate ventilation to avoid heat
- Climate-controlled environment
- Uninterrupted Power Supply (UPS)
- Moisture-free environment
- A place away from direct sunlight
- An area with minimal dust



## 2. About Your System

### Front View

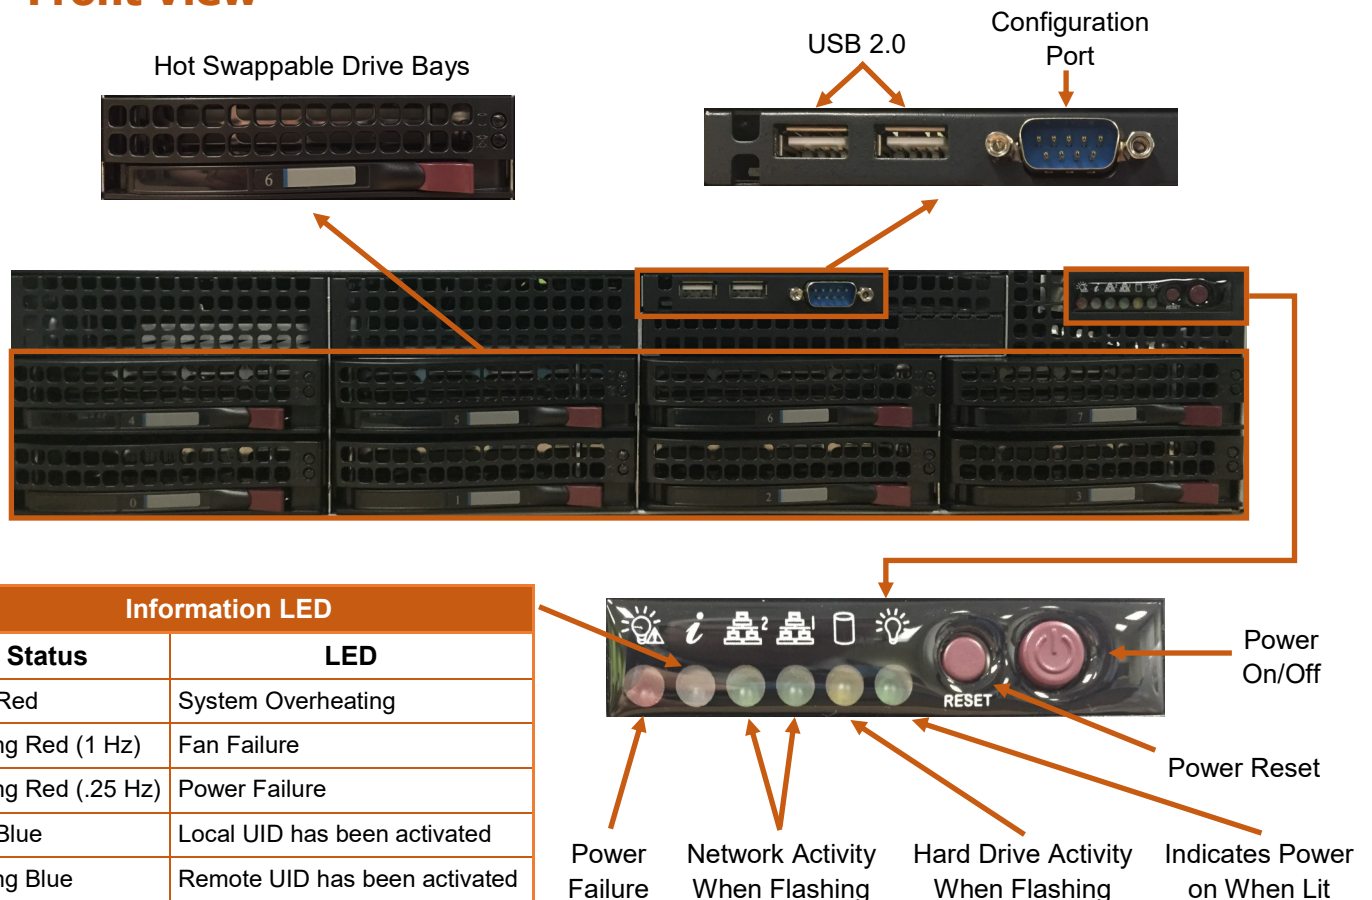



## Back View

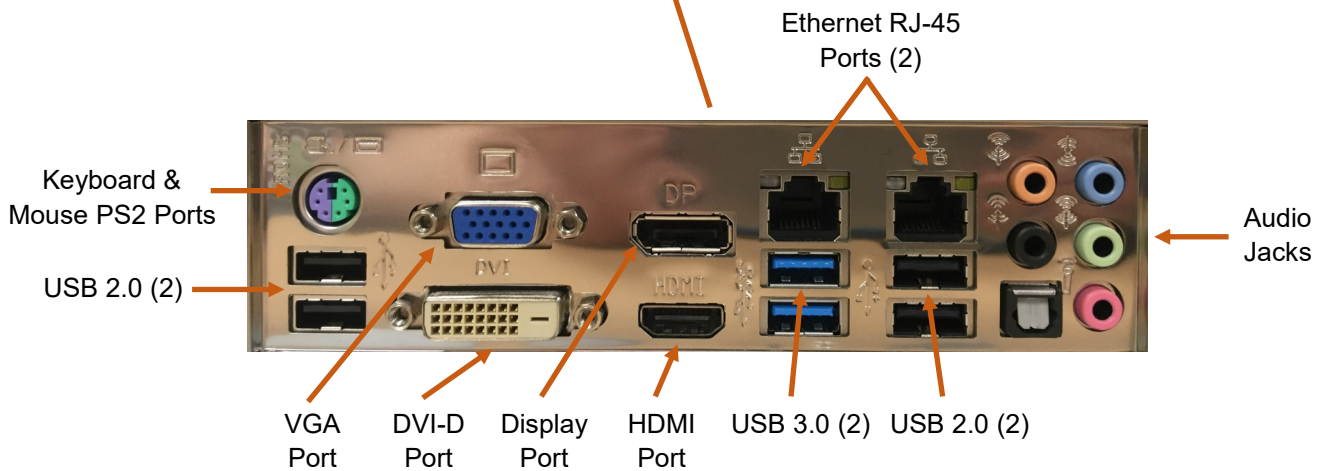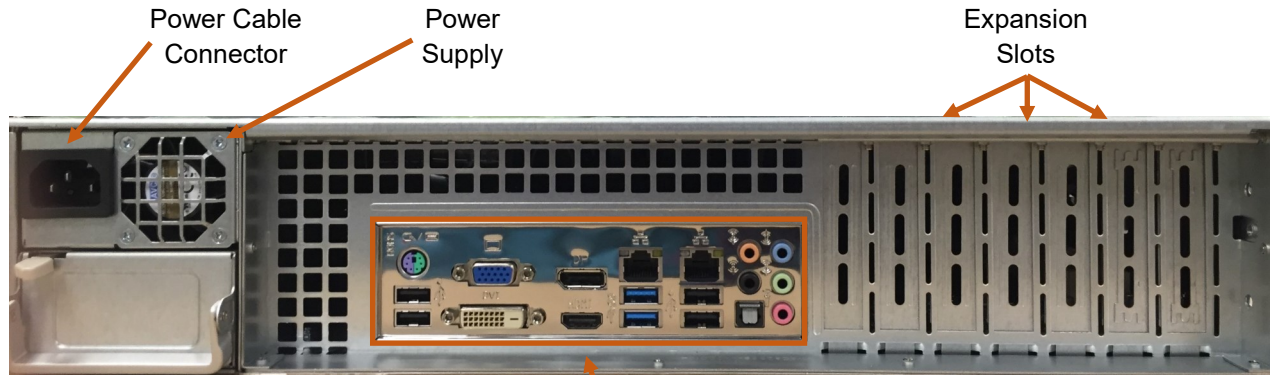

## 3. Setting Up Your System

1. (Optional) Install rack rails and securely mount the server to a server rack.
2. Connect a monitor to the VGA, DVI-D, Display Port or HDMI port.
3. Connect the network cable(s) to the Ethernet port(s).
4. Connect the keyboard and mouse to the USB 2.0 ports.
5. Connect the power cable. Press the power buttons on the monitor and computer.

